

Flashtronic



Flashtronic

Flashtronic

Safe locking check with sensor

- Optical locking display, directly on the fifth wheel coupling
- Simple coupling control – through a blinking LED display – even under low visibility
- 3 year life span
- Simple installation and replacement of the Flashtronic, no wiring necessary
- Designed for installation on JSK 42
- Equipment approval according to 72/245/EEC (2005/83/EC Amendment) and dangerous goods guidelines
- Fifth wheel coupling with Flashtronic approved according to 94/20/EC

www.jost-world.com

JOST

Flashtronic

Flashtronic Functions



Uncoupled

- The LED light is off if the fifth wheel coupling is uncoupled.
- The Flashtronic indicates coupling lock of the fifth wheel coupling immediately after coupling through a yellow LED light.



Coupled

- The integrated LED light blinks once each second.
- After 10 minutes, the frequency of the blinking is reduced and the LED blinks only once every 5 seconds.

Flashtronic Components



Sensor

- Sensor element in the handle area of the fifth wheel coupling
- Special handle with the actuating magnet for the sensor



Magnet

- Retrofittable on the JSK 42 (from October 2004/Serial Number 14B040xxxx)

Selection table / Versions available

Retrofit Flashtronic

Order No.	Description
SKE004350100	Retrofit kit

Spare parts Flashtronic

Order No.	Description
SKE004350000	Spare part kit battery and LED
SKE001360600	Flashtronic handle
SKE004410000	Spare part kit mounting

More information regarding our range of products can be found at www.jost-world.com

JOST

R
ROCKINGER

REGENSBURGER
ZUGGABEL

TRIDEC